


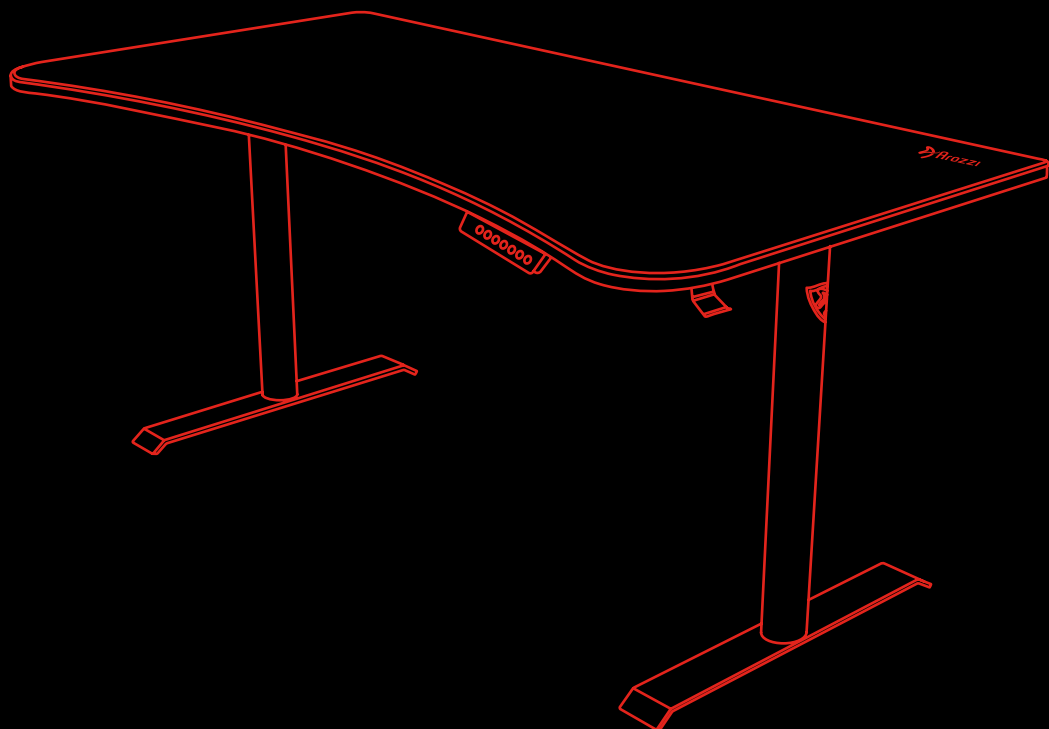
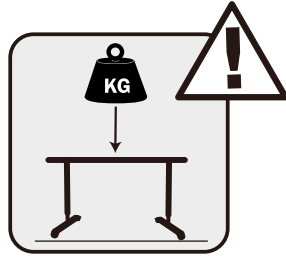
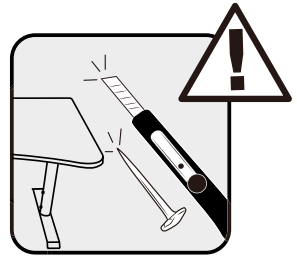
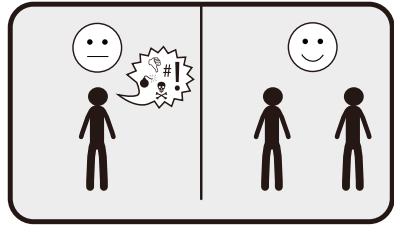
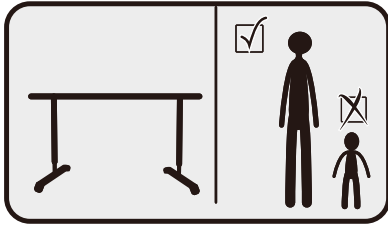



# ASSEMBLY GUIDE

**ARENA MOTO** 







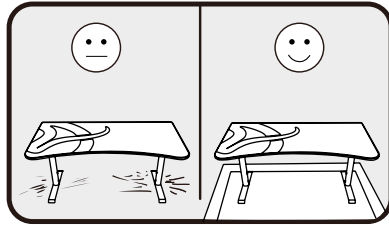



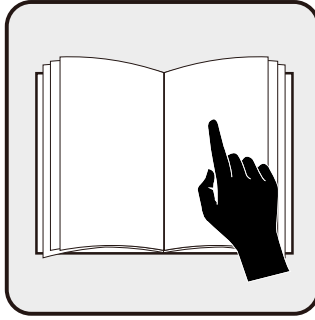



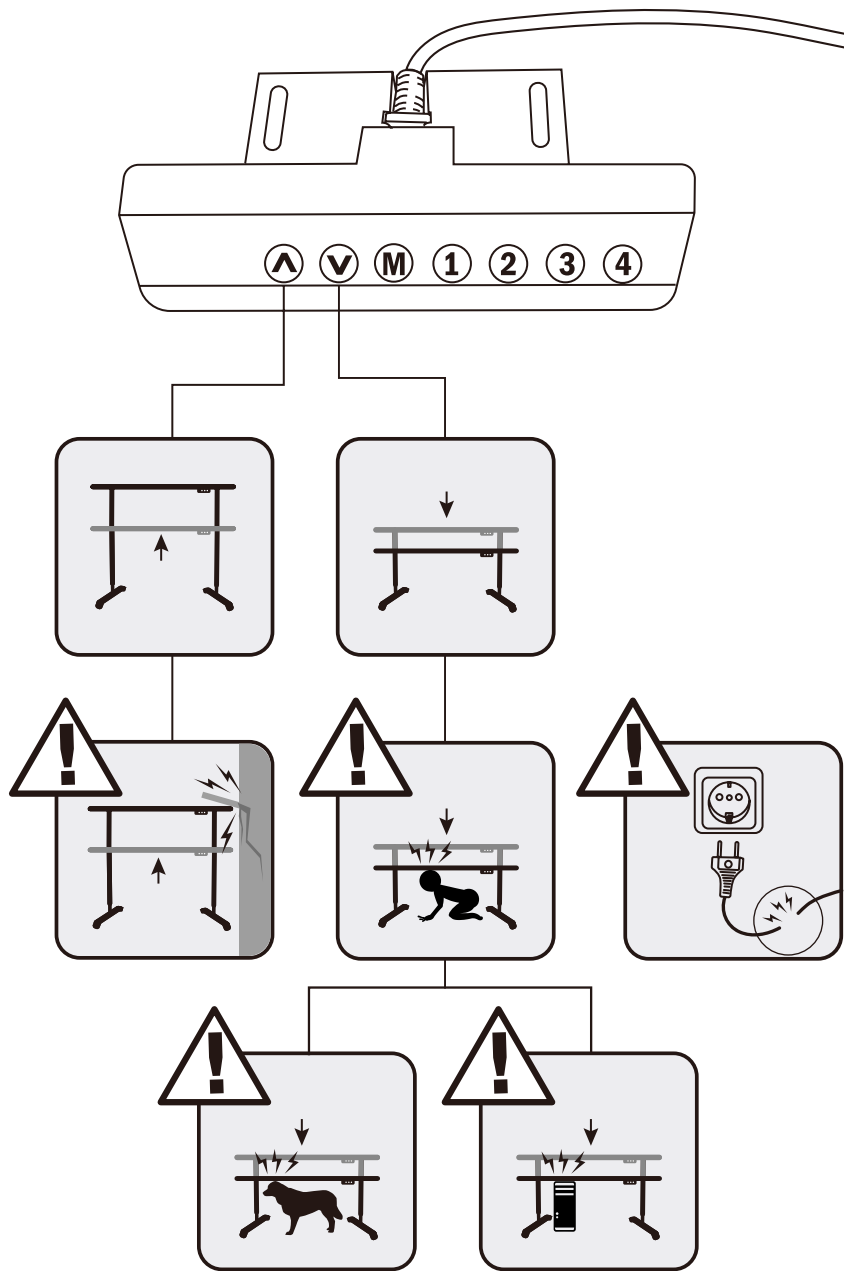


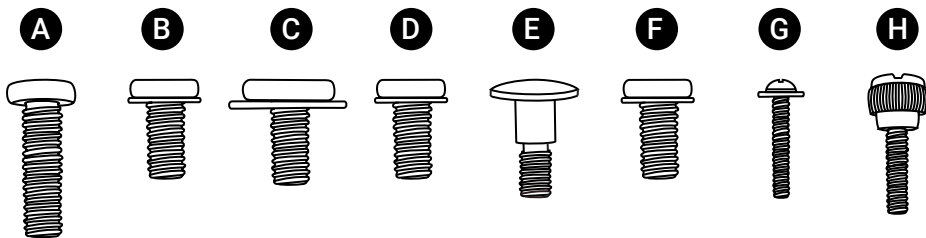


x8 x16 x8 x14 x10 x12 x4 x2

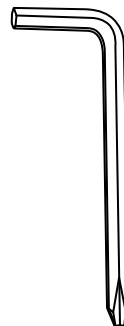

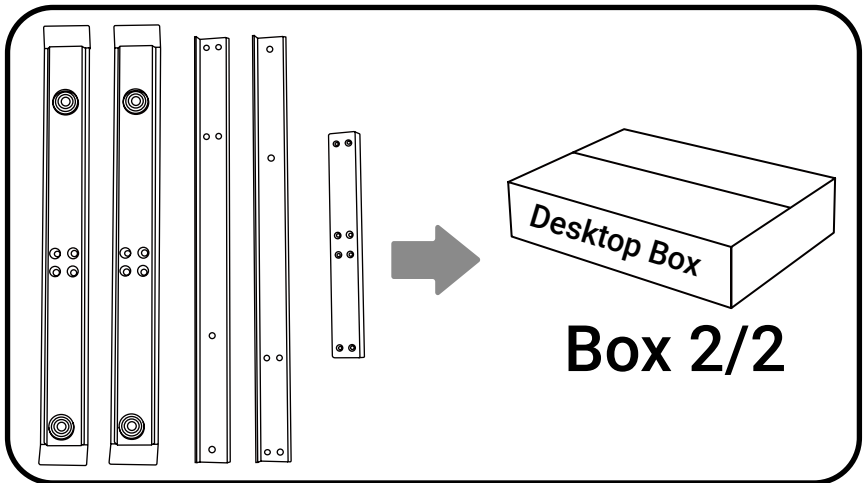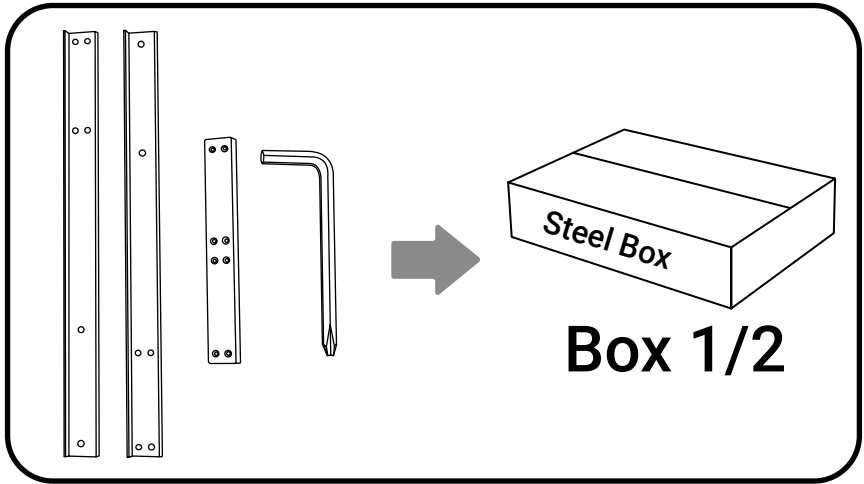


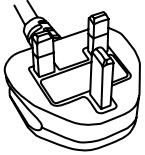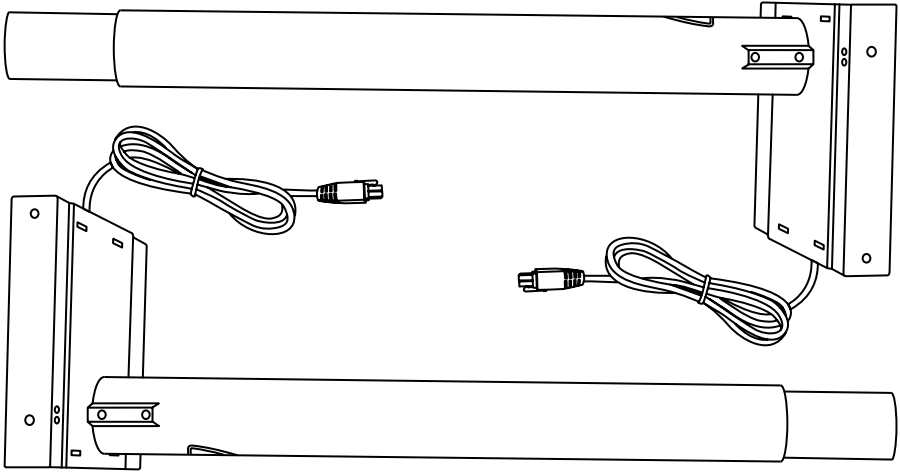


UK





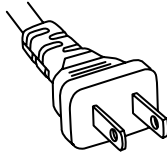


USA

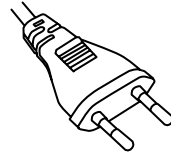


EU


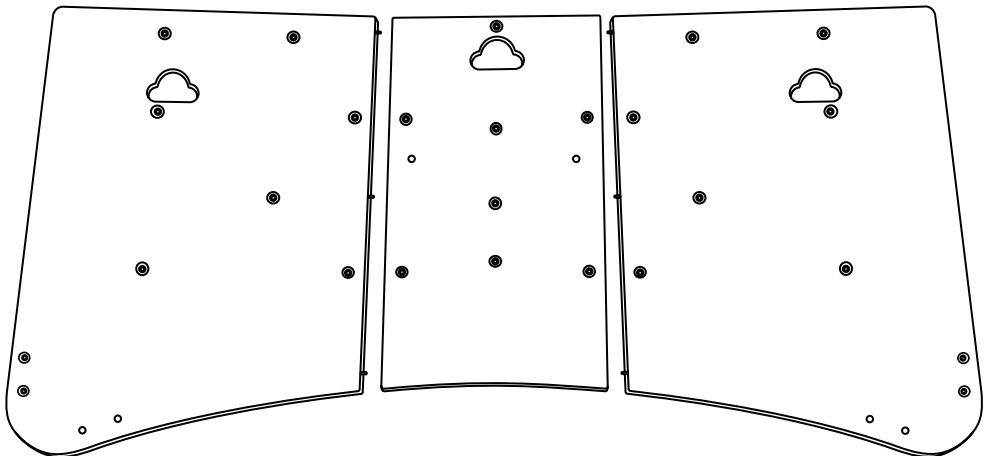


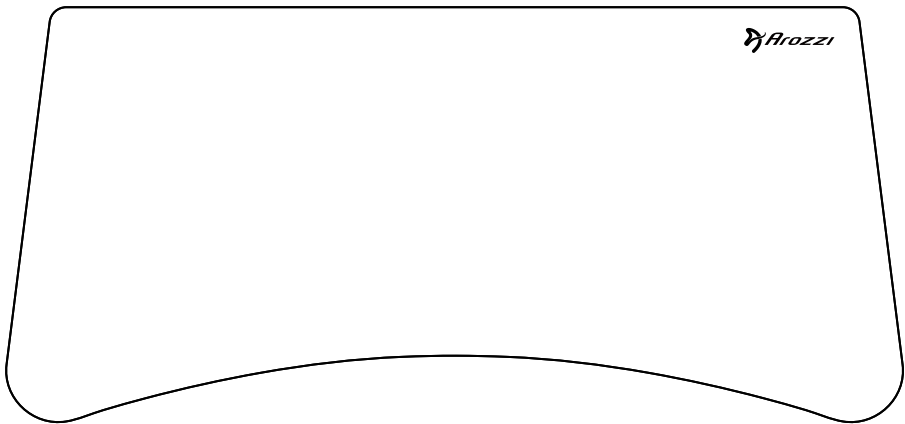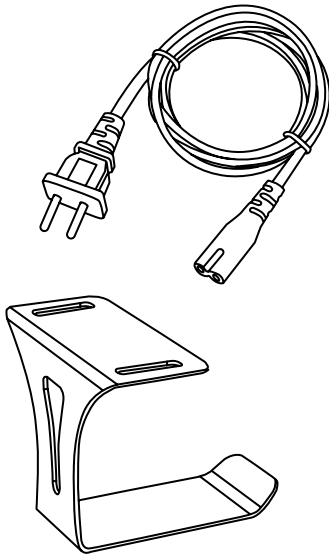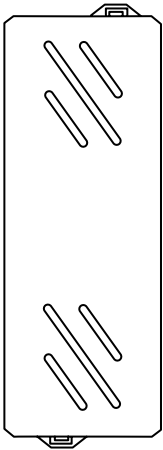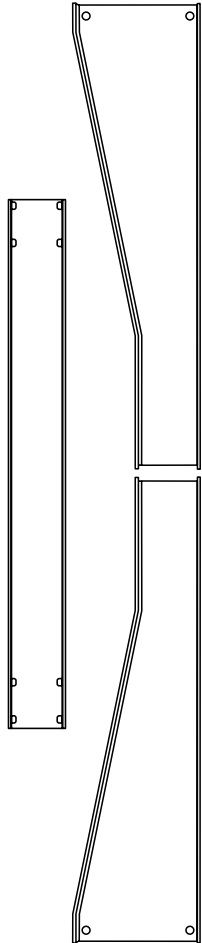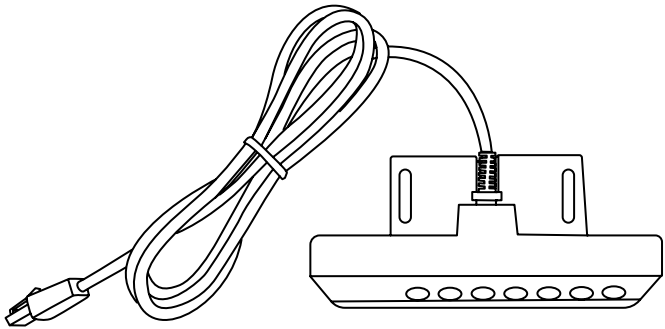


1

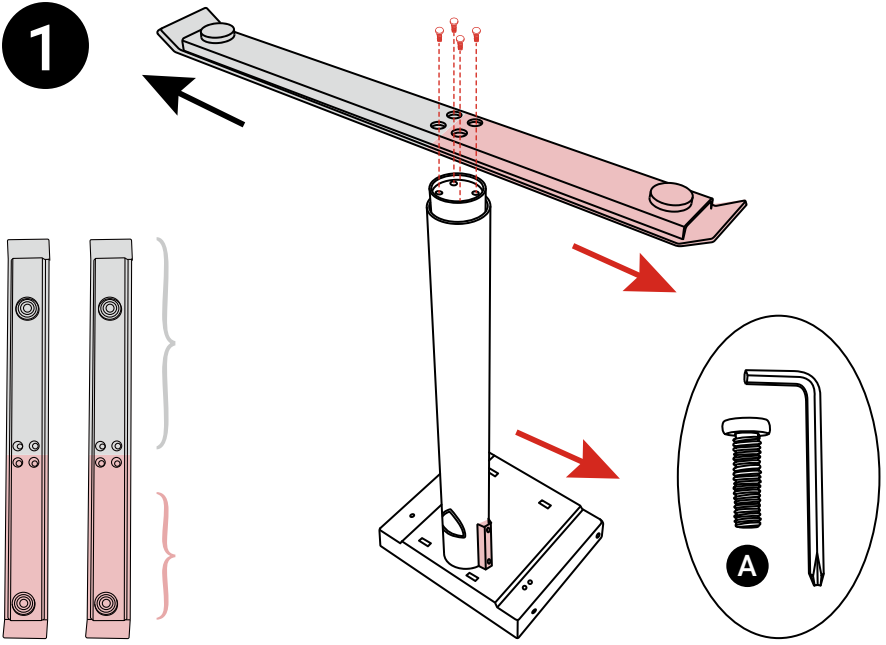

2

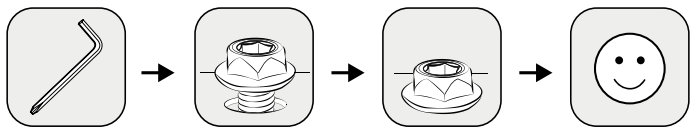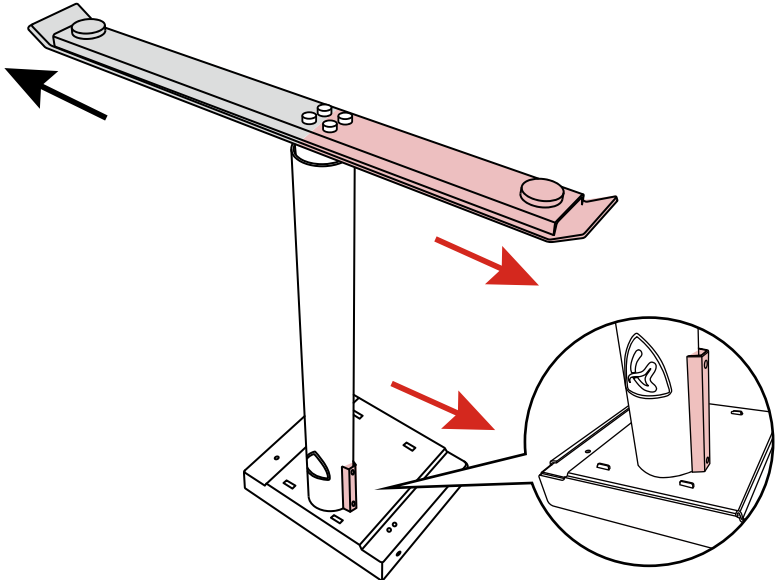





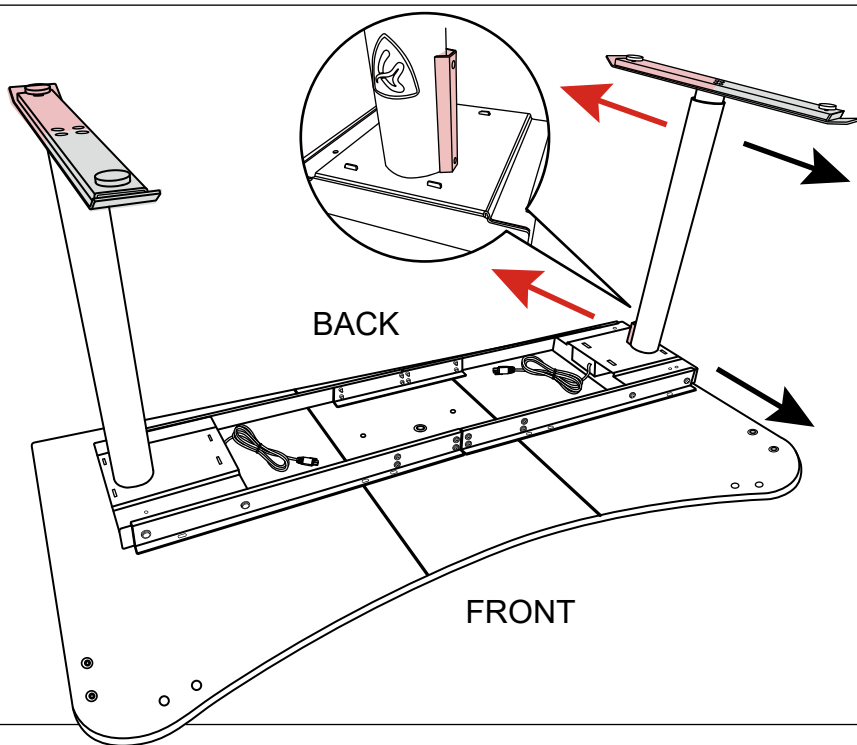


## ATTENTION!




Do not fully screw in the bolts until **step 9**. For more details, look at the video:




**3**

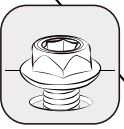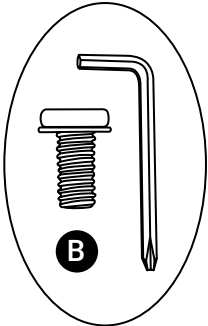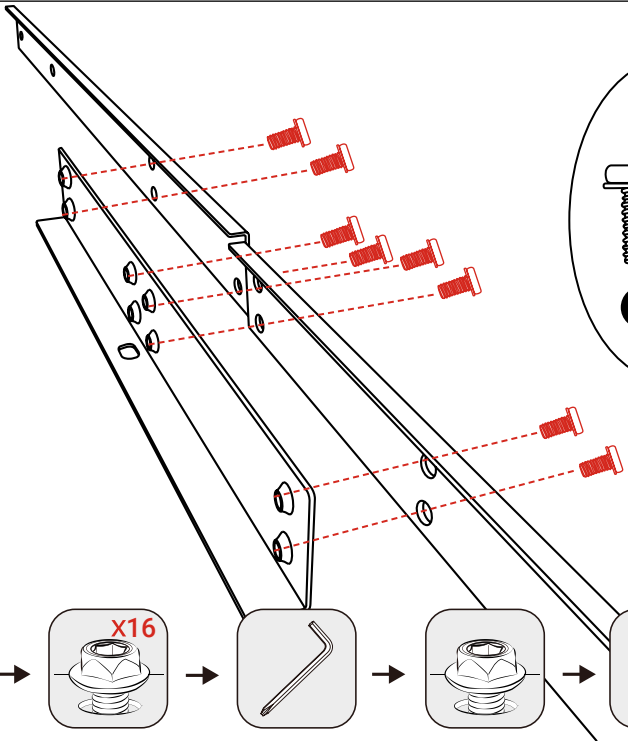


**4**

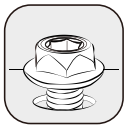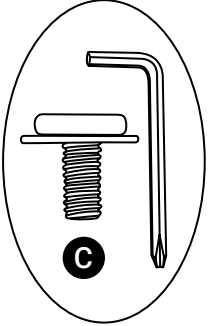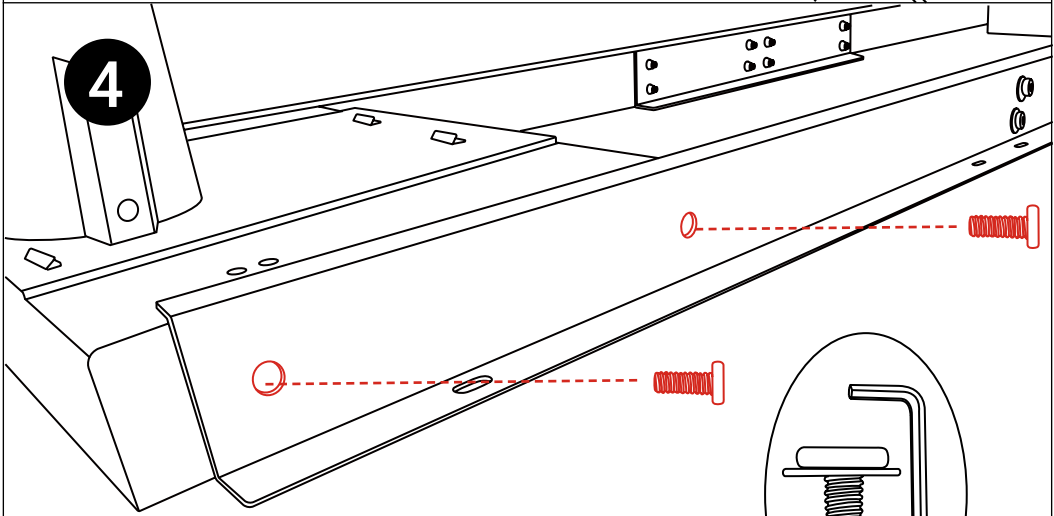



5

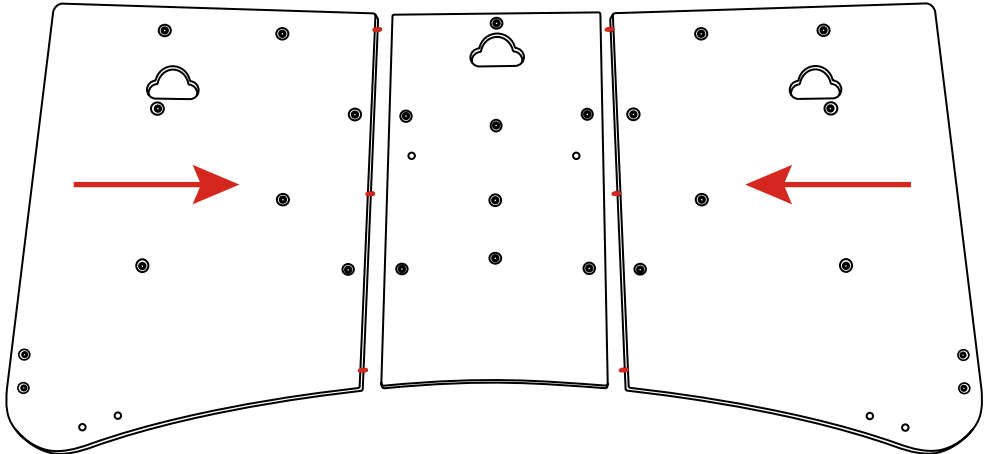


6

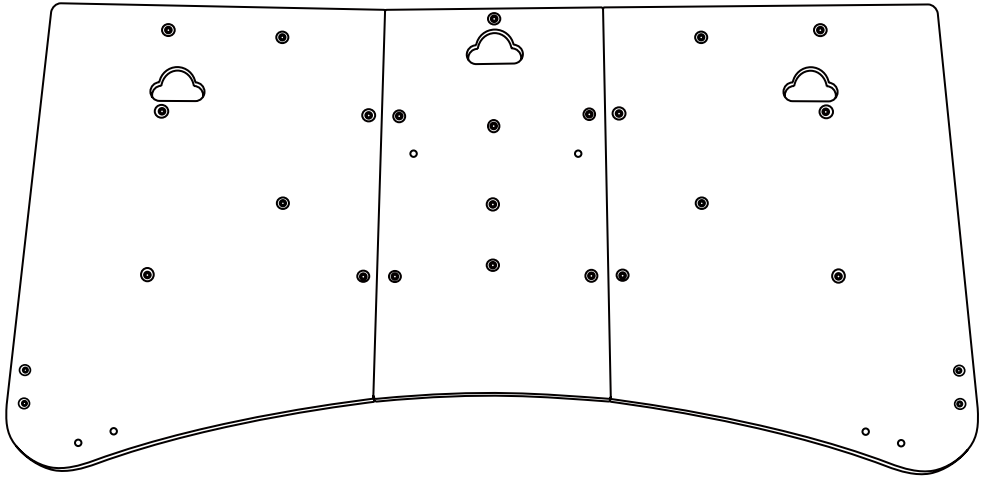




7

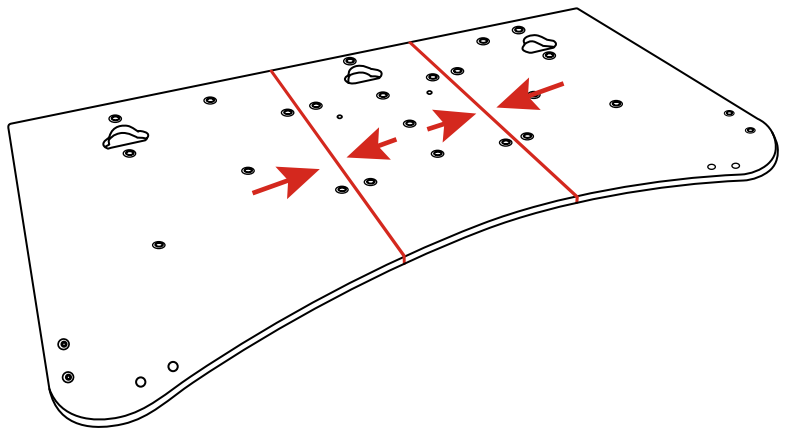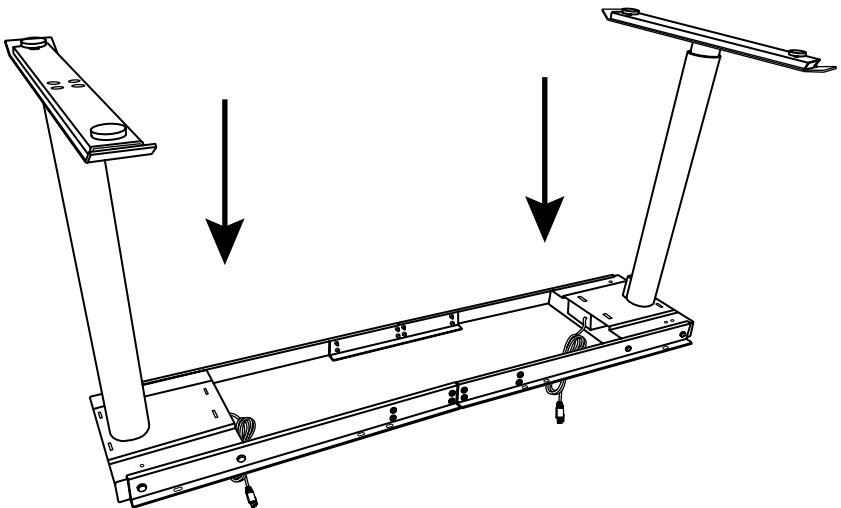


8

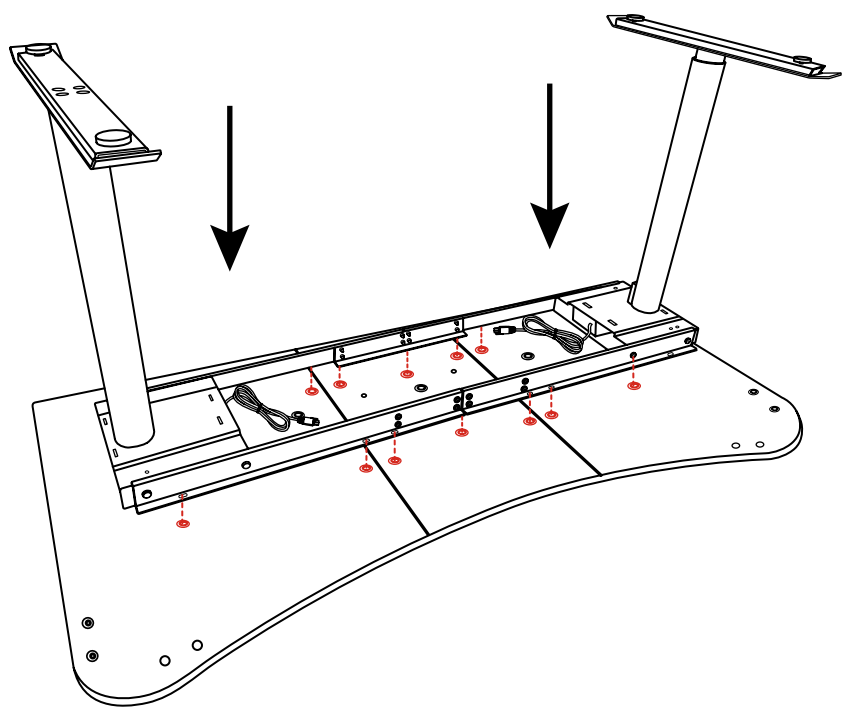


9

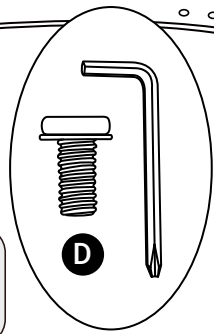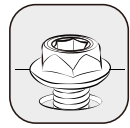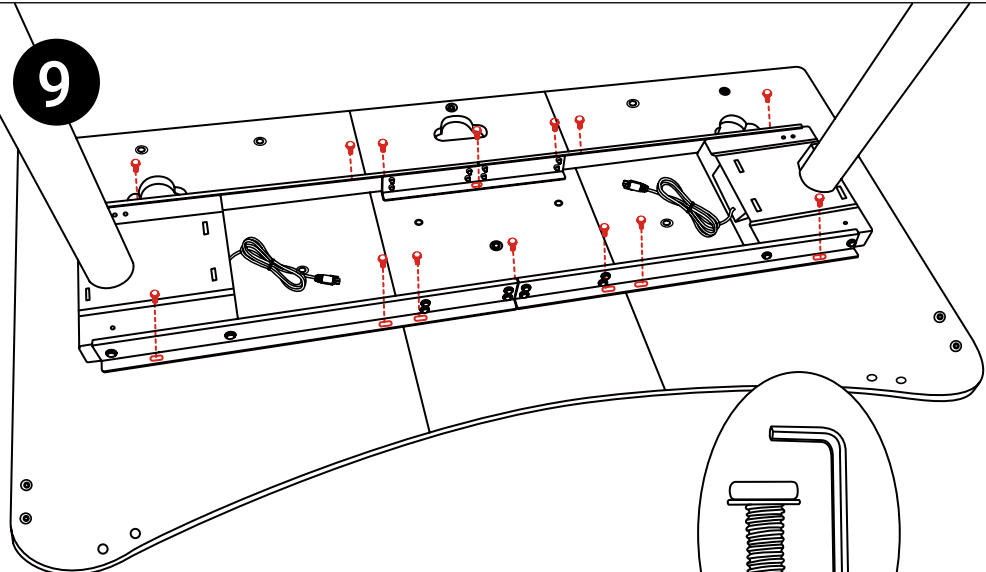


10

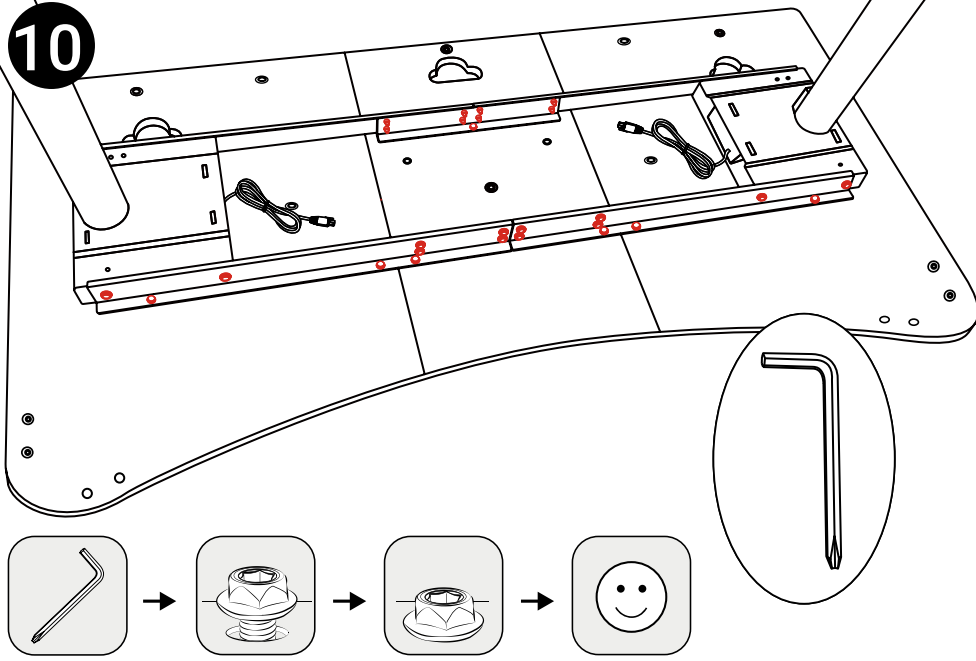


11

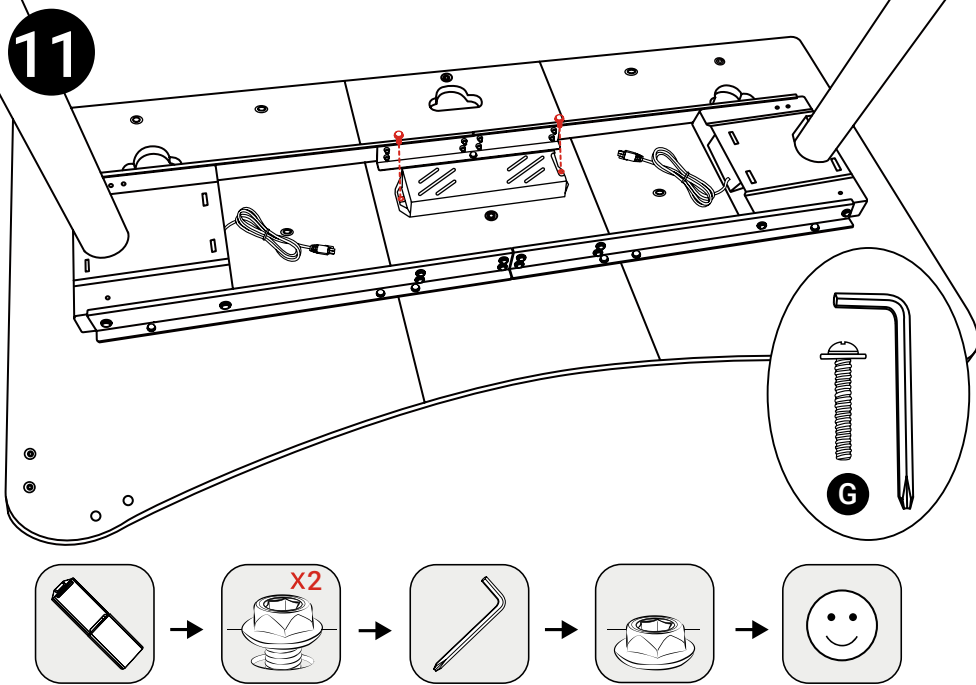






12

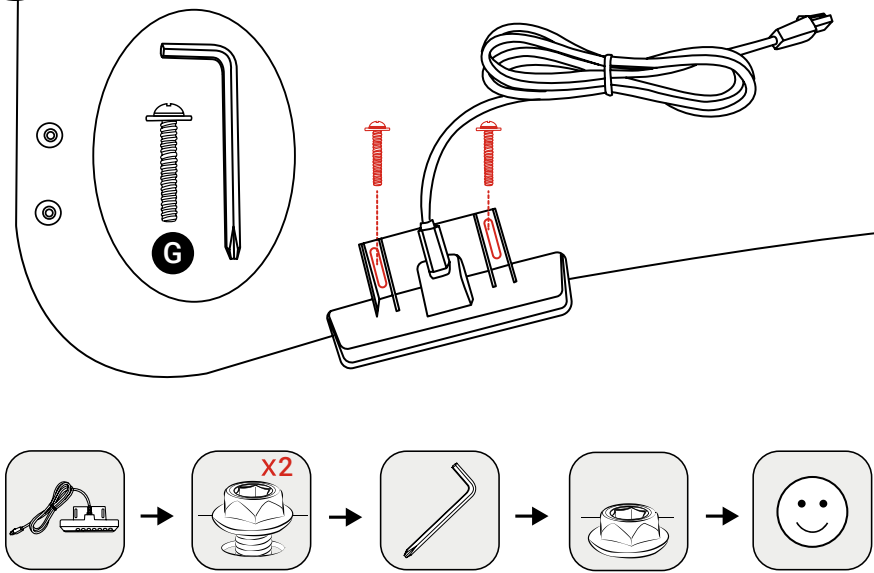



13

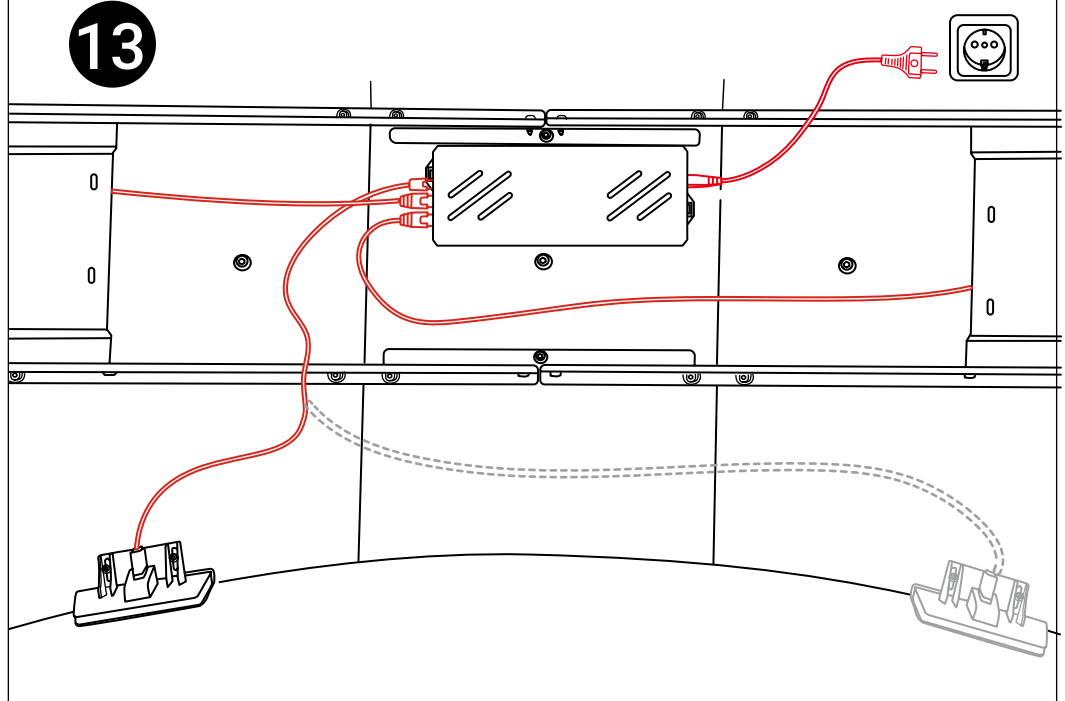






14

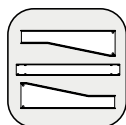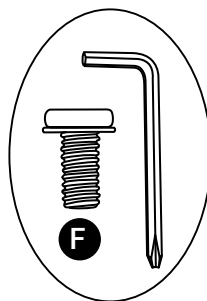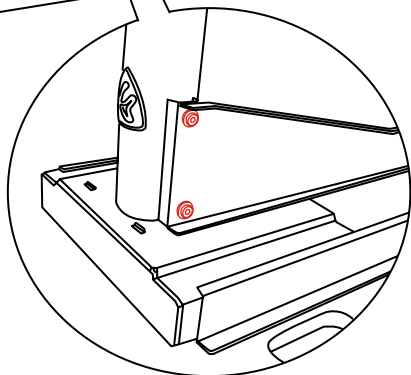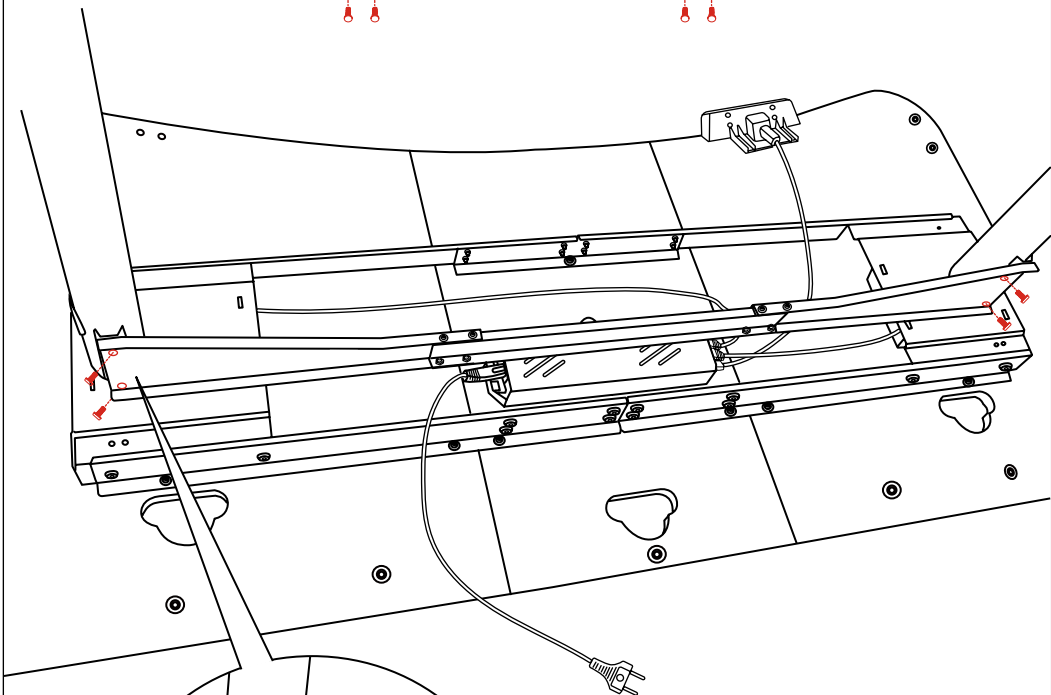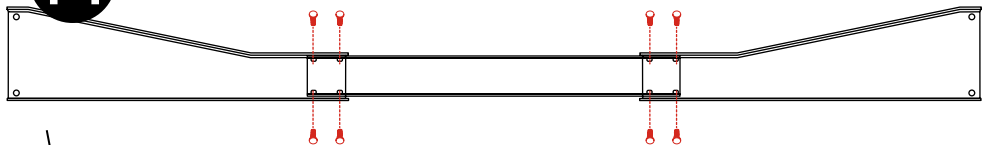





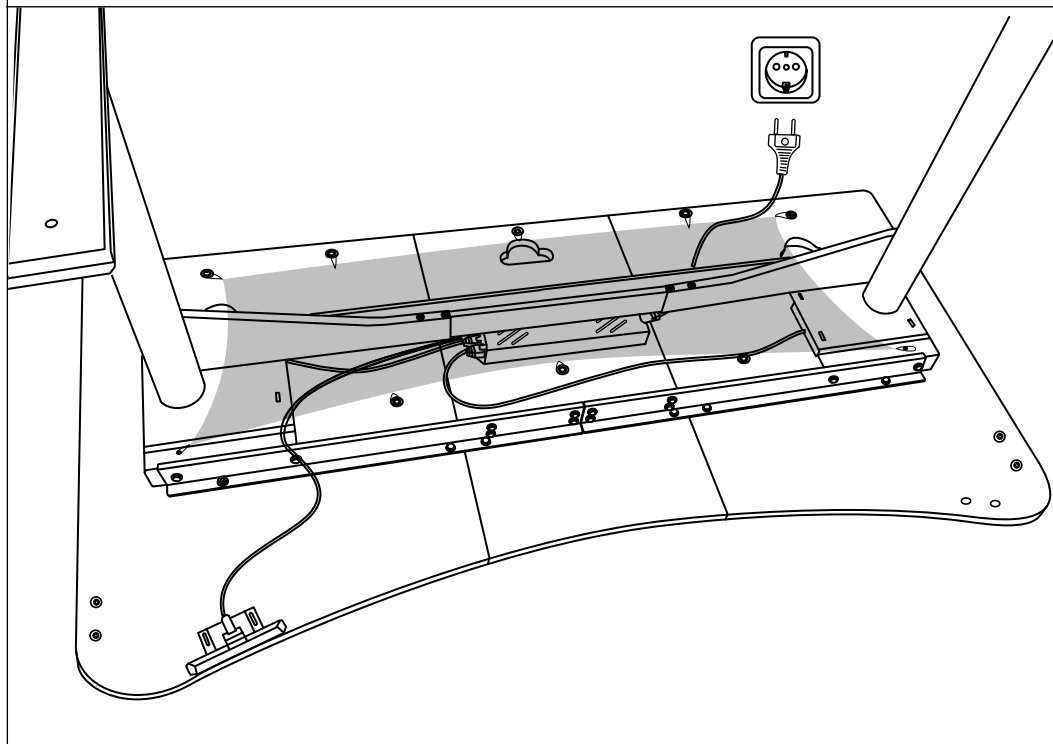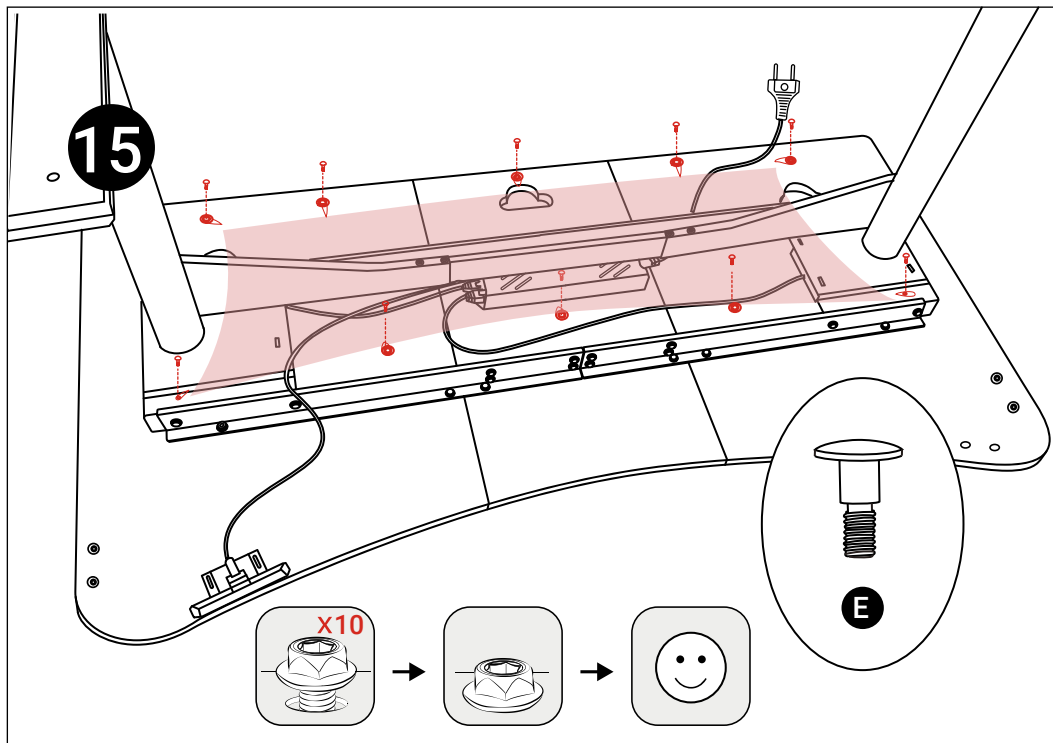

16

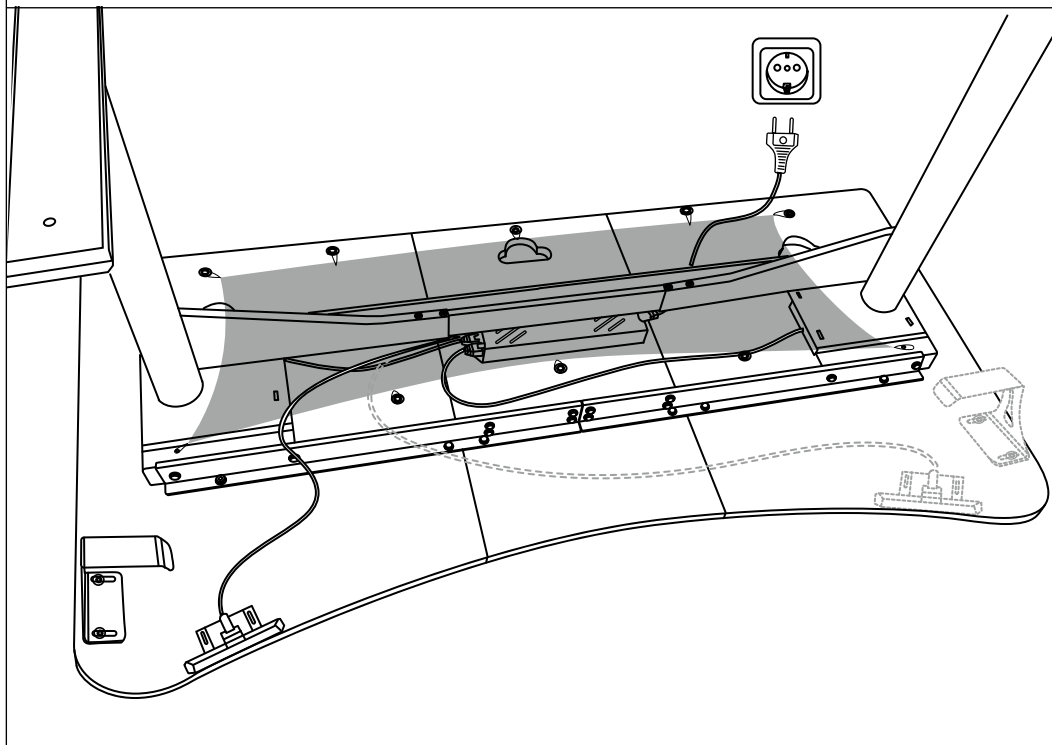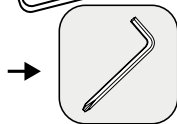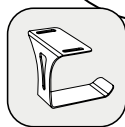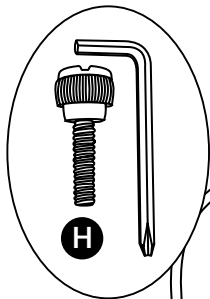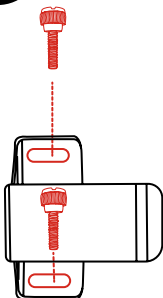



17

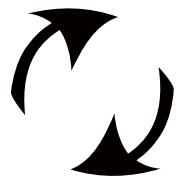


18

Arozzi

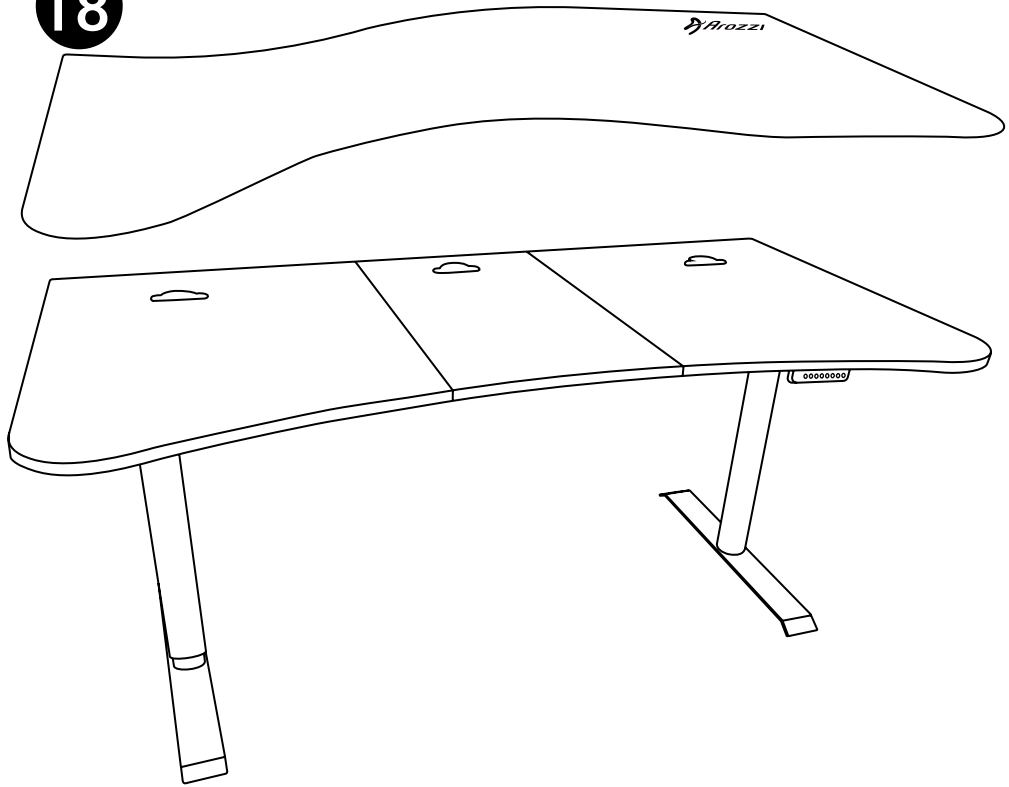

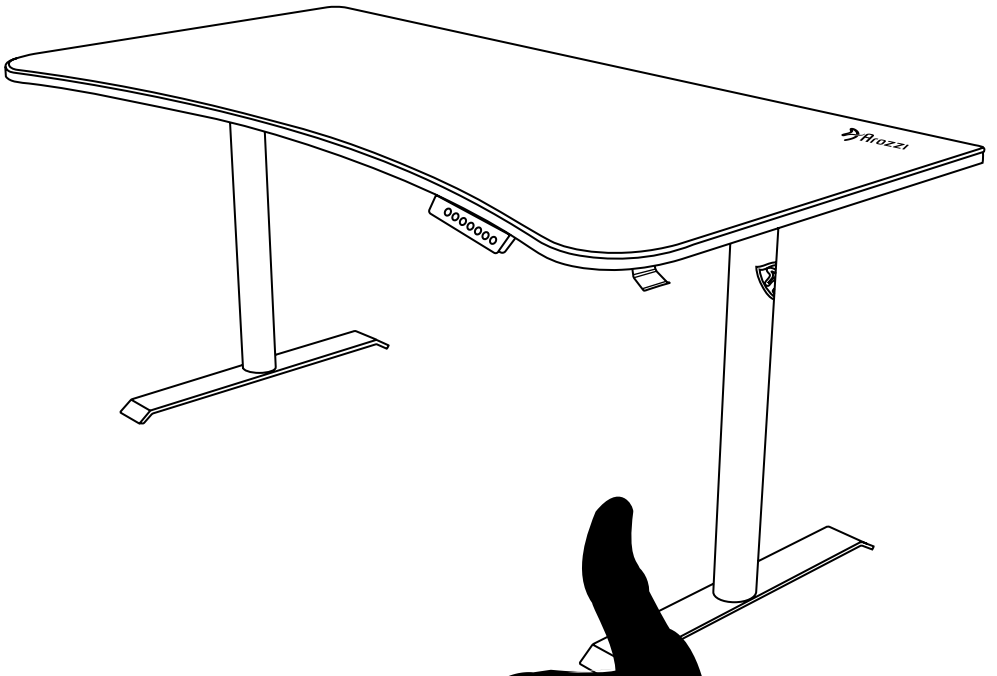

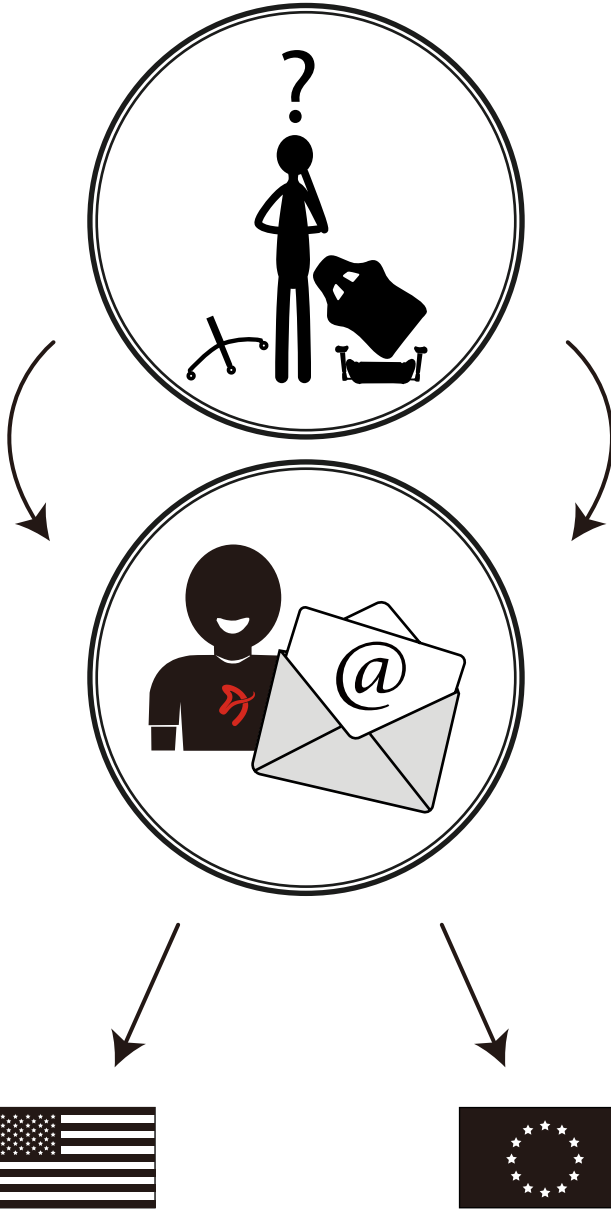

[service@arozzi.com](mailto:service@arozzi.com)

[support@arozzi.com](mailto:support@arozzi.com)

